4-Inch 2-Way Flush Mount Car Speaker

OWNER'S MANUAL — Please read before using this equipment.

CHOOSING A LOCATION

For the best performance, install these speakers on a solid, firm surface that does not vibrate at high volume levels. We recommend you mount the speakers in the door panels or the rear deck.

Note: Cardboard or fiber panels are not good mounting surfaces.

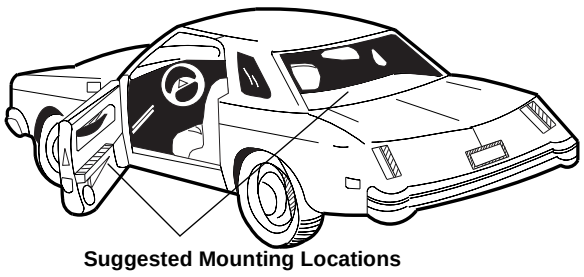

Suggested Mounting Locations

As you decide on a location, carefully inspect the area behind the proposed mounting surface.

- There must be a clear unobstructed area of at least $2^{1}/_{16}$ inches (52.38 mm) behind the panel.
- If it is a door location, check to be sure the window, window mechanism, and window handle will clear the speaker. Make sure the window opens and closes properly.

INSTALLING THE SPEAKERS

1. Use the supplied template to mark the speaker opening and the mounting-screw hole locations.
2. Cut out the marked speaker opening in the mounting surface.

   Note: Steel door panels and the rear deck (behind the upholstery) might already have large cutout areas for recessing the speaker.
3. Drill the four mounting-screw holes. Be careful not to drill into anything behind the mounting surface.
4. Mount the supplied speed clips directly onto the mounting-screw holes that you drilled using the supplied template.

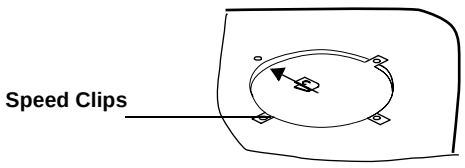

5. If necessary, route new speaker wires from the autosound system to the mounting area.

Cautions:

- Avoid routing speaker wires near moving parts, sharp edges, or where they will be pinched or stepped on. You can usually route them along the channel beneath the vehicle's door facings.
- If you selected door locations, you might need to punch a small hole in the door edge (near the door hinges) to route the wires into the door. Leave enough slack wire to open the door all the way.

6. Securely connect the positive (+) and negative (–) stripped speaker wire ends to the corresponding speaker terminals.

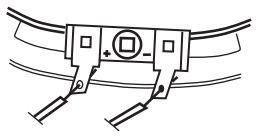

Cautions:

- Improper phasing can cause poor bass response. Be sure to connect (+) to (+) and (–) to (–).
- Do not connect any of your speaker terminals to chassis ground.

If you have a two-speaker system:

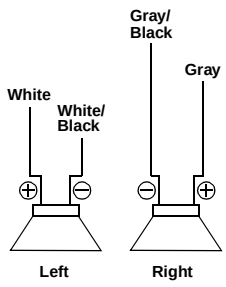

If you have a four-speaker system (front and rear):

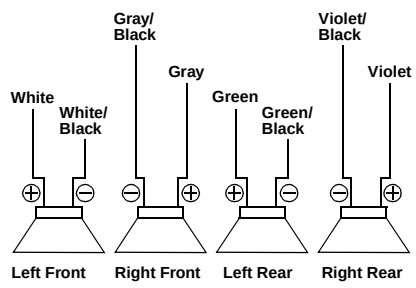

RadioShack
www.radioshack.com

© 2000 Tandy Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks used by Tandy Corporation.

7. Remove the grille from each speaker's mounting bracket to expose the mounting holes.





8. Place the mounting bracket on the speaker.

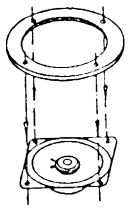

9. Align each speaker's mounting holes and the mounting bracket's holes with the holes on the speed clips, thread a supplied screw through each mounting hole, and tighten all screws until they are secure. To help secure the grille to the mounting bracket, press small pieces of the supplied putty into the mounting bracket's slot.

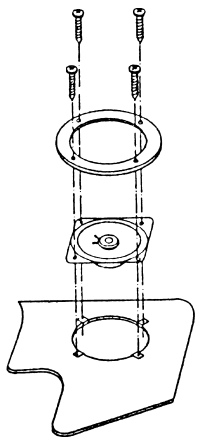

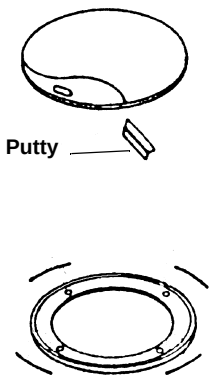

10. Firmly press the grille onto each speaker's mounting bracket.

SPECIFICATIONS

Speaker Size:
- Woofer ..... 4 Inches (101.6 mm)
- Tweeter ..... 1½ Inches (38 mm)

Woofer Cone ..... Paper Coating

Tweeter Cone ..... Reshy Mylar

Grille ..... ABS Material

S.P.L. 1W/1m ..... 87 dB

Woofer Magnet Weight ..... 5.3 oz (151.56 g)

Tweeter Magnet Weight ..... 0.6 oz (17.63 g)

Power Rating ..... 20 W RMS/Channel

Maximum Power ..... 60 W/Channel

Impedance ..... Nominal 4 ohms

Frequency Response ..... 105 Hz–16 kHz

Weight (one speaker) ..... 1 lb, 1.5 oz (496 g)

Dimensions (HWD) ..... 5⅜ × 5⅜ × 2⅜ Inches (137 × 137 × 61 mm)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor,
Fort Worth, TX 76102

We Service What We Sell *12/99*

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

12-1747
02A00
Printed in Indonesia